



***For Your Convenience: This Isuzu File
Is Shared By Diesel Parts Direct***



YOUR ONE STOP SUPERSTORE FOR DIESEL ENGINE PARTS

SHOP NOW

Isuzu Engine Identification

Isuzu Industrial Diesel Engine Serial Number Location	
Isuzu Model Designation	Serial Number Location
All 2C** & 3C**	Left side, lower center of block between front engine mount and starter.
All 3Y**	Right side of block above injection pump.
All 2K** & 3K**	Right front, on injection pump mounting flange.
All 2A** & 3A**	Right front, top part of block.
All 3L** & 4L**	Right front, top part of cylinder block. Just behind the front cover.
C240	Left front, top part of cylinder block.
All 4J**	Left rear, top part of cylinder block.
All 4B**	Left front, top part of cylinder block.
All 6B**	Left front, lower part of cylinder block.
4HK1	Right center, lower part of cylinder block.
6HK1	Right front, top part of cylinder block below number one exhaust port.
6SA1	Left rear, top part of cylinder block.
6SD1	Left center, lower part of cylinder block.
6UZ1	Left center, lower part of cylinder block.
E120 6RB1	Right side of cylinder block, below injection pump.
6WG1	Left front, top part of cylinder block in front of injection pump.
Note: All directions are as viewed from the flywheel end of the engine. All serial numbers are stamped and consist of six numerical digits. Engine Model is cast on the side of the block and/or located on the identification label, which is found on the valve cover.	